



Bladder Tank Installation Instructions

1. Charge the AIR side of the tank (see schrader valve under the plastic cap on the opposite side of the tank from the Pipe connection). Air pressure should be 5 psi below desired setpoint water pressure. Replace the plastic cap. NOTE: THIS MUST BE COMPLETED PRIOR TO PRESSURIZING THE TANK WITH WATER.
2. Remove the plug on the discharge pipe assembly and install the tank on the pipe connection on the pump system.
3. Questions? – Call 610-864-1853

